 



Shooting Still Images (AUTO Mode)

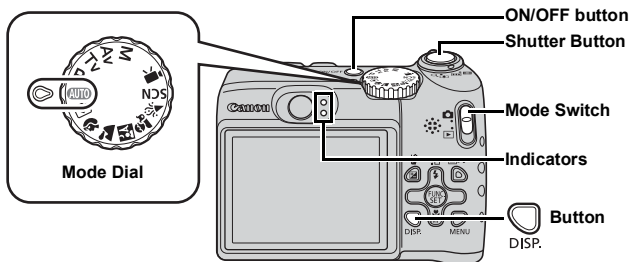

1. Press the ON/OFF button.

- The start-up sound will play and the start-up image will display in the LCD monitor.
- Pressing the ON/OFF button again turns the power off.

2. Select a shooting mode.

1. Set the mode switch to  (shooting).
2. Set the shooting mode dial to **AUTO**.



3. Aim the camera at the subject.

Avoiding Camera Shake

Keep your arms tight against your body while holding the camera firmly by the sides. Using a tripod is also effective.



4. Press the shutter button lightly (halfway) to focus.

- When the camera focuses, it beeps twice and the indicator lights.

5. Press the shutter button fully (all the way) to shoot.

- The shutter sound will play once and the image will record.
- Recorded images are displayed on the LCD monitor for approximately 2 seconds immediately after shooting (Rec. Review). You can shoot by pressing the shutter button even when an image is being displayed.
- If you hold the shutter button down after a shot, the image will continue to display.
- The indicator will blink green and the file will record to the memory card.

To Shoot Images in Focus

The camera automatically sets the focus when you press the shutter button halfway*.

* The shutter button has a two-stage action. Pressing it down to the first stage is referred to as "pressing halfway".

Correct

Press halfway to set the focus

Beep, beep...

Press fully

Shooting Preparations Complete: lights green (orange when the flash will fire)

Recording: blinks green

✗ Incorrect

Just pressing fully

ISO200

AF Frame

An AF frame will display in green on the LCD monitor at the point of focus.


1/250 F5.6



Mute Setting

When you hold down the **DISP.** button while turning on the camera, the mute setting will be set to [On]. You can change the setting in [Mute] in the Set up menu (p. 52).

Shooting in Easy Mode

This camera features a shooting mode, Easy mode, that automatically selects all camera settings except the flash. This mode is ideal for first time camera users, or users who do not make many settings. You can select whether or not to use the flash with the  button, allowing you to take images even where flash photography is prohibited.

1. Set the mode dial to  (Easy mode).

 


2. Aim the camera at the subject.
3. Press the shutter button halfway to focus.
4. Press the shutter button fully to shoot.





No settings, other than flash settings, can be made in Easy mode. Even if you press the **MENU** or **FUNC./SET** button, no menu will display.

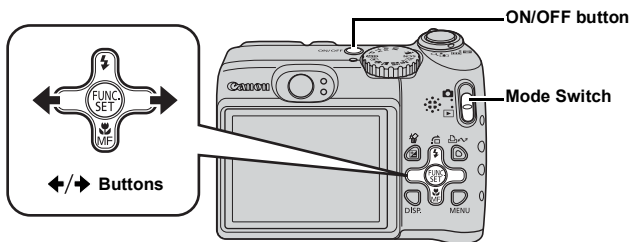
Viewing Still Images



 
1. Press the ON/OFF button.
2. Set the mode switch to  (playback).
3. Use the  or  button to display the image you wish to view.






- Use the  button to move to the previous image and the  button to move to the next image.
- The images advance more quickly if you keep the button pressed, but they will appear coarse.

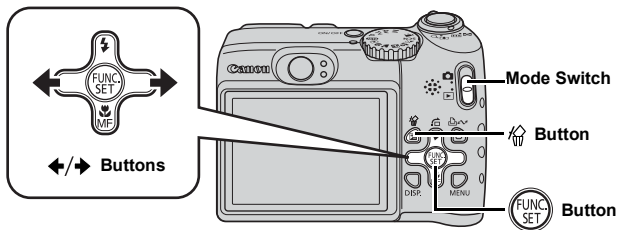

- In the  menu, you can set [Resume] to either [Last seen]* or [Last shot] (p. 51). (* Default setting)
- If you select [Last seen], the last image viewed will display (Resume Playback).
- The following actions will display the most recent image regardless of the [Resume] settings.
Shooting an image, changing the memory card, or editing an image on the memory card using a computer.

Erasing



1. Set the mode switch to  (playback).
2. Use the  or  button to select an image to erase and press the  button.
3. Confirm that [Erase] is selected and press the  button.

To exit instead of erasing, select [Cancel].



Please note that erased images cannot be recovered. Exercise adequate caution before erasing an image.